
TABLE of CONTENTS

	PREFACE	iii
	• About This Guide	iii
	• iLane™ Warranty and Licensing	iv
	• Subscriptions	v
	• Drive Safely!	v
Section 1	GETTING ACQUAINTED	7
	1.0 Welcome to iLane	7
	1.1 What is iLane?	7
	1.2 How Does iLane Work?	8
	1.3 What's in the Box?	10
	1.4 You'll Also Need...	11
	1.5 Compatibility in Your Vehicle	12
	1.6 Where to Install	12
Section 2	KNOW YOUR iLANE™	13
	2.0 Feature Summary	13
	2.1 Status Lights and Buttons	14
	2.2 Connections	17
	2.3 iLane and Your Hands-Free System (HFS)	20
Section 3	HOW TO SET UP iLANE™	23
	3.0 Setup Summary	23
	3.1 iLane Setup Procedure	24
Section 4	WORKING WITH iLANE™	33
	4.0 Powering Up / Down	33
	4.1 Deep Sleep and "Wake Up"	33
	4.2 Volume	34
	4.3 The Basics	34
	4.4 Receiving Messages	36
	4.5 Sending Messages	40
	4.6 Checking Your Calendar	44
	4.7 Calls	44
	4.8 Checking News and Weather	47
	4.9 Pausing iLane	47
	4.10 Canceling An Action	49

TABLE of CONTENTS

Section 5	TOOLS and ADVANCED OPTIONS	51
	5.0 Changing iLane System Settings	51
	5.1 “Expert” Prompting Mode	54
	5.2 Adjusting Microphone Sensitivity	54
	5.3 Restoring Factory Defaults	55
	5.4 Personalizing and Updating iLane	56
	5.5 Multiple Users	58
Section 6	SPECIFICATIONS and REGULATORY INFORMATION	59
	6.0 Specifications	59
	6.1 Regulatory Information	60
Section 7	CONTACT US	63
Section 8	VOICE COMMANDS	65

Due to continuous advancements, all information is subject-to-change. Please consult my.ilane.com for revisions.

PREFACE






About This Guide

Welcome! This guide explains all features, connection, setup and operation of the iLane™ 7100. You will be able to listen to your first email in just a few minutes – skip to Section 3 to get started right away. Keep reading to discover full details and helpful tips to stay connected – hands-free and hassle-free – beginning with your very next trip. This guide supports the iLane software version indicated at the bottom of the Table-of-Contents on page “i”. Your software version may differ.

For a streamlined jump start as well as a list of basic voice commands and common shortcuts to keep handy in your vehicle, please refer to the *iLane Quick Start* provided with your purchase.

Visit my.ilane.com for all updates, release notes and other supporting materials available over the life of the product. For additional information anytime, don't miss the *Support* page at www.ilane.com. We want to help you get the most out of iLane!

GRAPHIC CONVENTIONS

	=	 Bluetooth ® WIRELESS TECHNOLOGY <small>Registered Trademark of Bluetooth SIG, Inc.</small>
	=	<i>NOTE</i> or <i>TIP</i> for exceptions, emphasis and/or help
	=	Special safety requirement or reminder
<i>Bold italic</i>	=	Voice Command
	=	a Bluetooth® hands-free system of your choice

iLane™ and its related marks, logos, images and symbols are the exclusive property and trademarks of Intelligent Mechatronic Systems, Inc. All other trademarks are the property of their respective owners as shown on the rear cover.

PREFACE

DISCLAIMER

While every effort has been made to ensure that all information published and provided in support of iLane is accurate, complete and current, IMS can accept no liability for possible errors or omissions. Due to ongoing research, please note that all iLane information is subject to change without notice.

COPYRIGHT NOTICE

No part of this guide or other IMS publications may in any form or by any means be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without prior written permission from IMS.

iLane™ Warranty and Licensing

iLANE WEB PORTAL TERMS and CONDITIONS

Use of iLane requires access to iLane Web Portal for services/apps such as initial *iLane Gateway* software installation, software updates, on-demand news and weather reports, and other supporting materials available at my.iLane.com.

To complete the required *iLane Registration Process* and obtain these portal services, you must agree to the *iLane Web Portal Agreement* provided at my.iLane.com (a.k.a., the iLane Web Portal).

Please retain a copy of the *iLane Web Portal Agreement* for your records.

iLANE SOFTWARE LICENSE AGREEMENT

Use of iLane requires installation of *iLane Gateway* software on your smartphone.

To complete this installation, you must agree to the *iLane Software License Agreement* provided at time of *iLane Gateway* software download. The license agreement is also posted on my.iLane.com (a.k.a., the iLane Web Portal).

To use ***iLane Talk 2 TXT*** (optional), you must also agree to the *iLane Talk 2 TXT End User License Agreement* provided at time of *iLane Gateway* download (v1.3.1.883 or higher). This license agreement is also posted on

PREFACE

my.iLane.com (a.k.a., the iLane Web Portal), where *iLane Talk 2 TXT* is available as an option on the *Preferences* page.

Please retain a copy all applicable license agreements for your records.

iLANE LIMITED PRODUCT WARRANTY


The iLane warranty is published in the *iLane Limited Product Warranty* booklet included with the iLane device, and is posted on my.iLane.com (a.k.a., the iLane Web Portal).

Please retain a copy of the *iLane Limited Product Warranty* for your records.

Subscriptions

iLane's wide range of core features – also called *apps* – are conveniently bundled into the *Always Connected* subscription. Lifetime access to this comprehensive bundle is included with all iLane units purchased prior to November 2010; subscription purchase is required for all other iLane 7100 units. Any iLane 7100 user may purchase additional subscriptions for optional apps such as iLane Talk 2 TXT.

Drive Safely!

 **IMPORTANT WARNING!** Safe and responsible driving requires your full attention. Do not watch or program the iLane Product while driving any motor vehicle. Remain fully attentive to driving at all times. Do not operate the iLane Product in a manner that reduces your full and proper attention to the operation and control of any motor vehicle. You are responsible for using the iLane Product in compliance with all applicable laws in the jurisdiction in which you drive.

To silence iLane immediately, say **Quiet**.

This section introduces the basics about iLane and what it does.

1.0 Welcome to iLane

You will soon be on the road with the world's only complete hands-free solution that makes it *safer* and *smarter* for you to manage critical information while in-vehicle. By simply conversing with iLane™ through your own hands-free system, you can enjoy iLane's rich set of features to comfortably keep up with your Inbox, send replies, field phone calls, check your day's calendar, and even enjoy on-demand content services such as news and weather reports, all while continuing to focus on your most important driving task: safety.

1.1 What is iLane?

iLane is an intelligent in-vehicle device that uses a simple interface of spoken prompts and commands to manage your email and other smartphone communications.

With iLane on board, you simply *listen to read* and *talk to send*. You will find that iLane has a pleasant conversational style, and reads messages aloud only at your request. You can listen to as much or as little as you like, all through your vehicle's own hands-free system and speakers.



Wish to respond to an email? Say **Reply**, then continue speaking to record a VoiceNote – you can even say **Review** to check it before sending. Or perhaps you would like to **Forward** an email, or you

GETTING ACQUAINTED

need to quickly **Call Back** or send a short text with the optional **Compose SMS**. Just relax and work naturally – iLane is listening.

iLane's range of intuitive voice commands provides efficient management of other smartphone applications such as phone calls, incoming SMS and PIN messages, your day's calendar, and even on-demand news or weather reports. With nothing to type or view when using iLane, you can keep your hands on the wheel and your eyes on the road.

1.2 How Does iLane Work?

Once iLane is *paired* to your smartphone and your hands-free system as described in Section 3, simply enter your vehicle. iLane will recognize and “connect” to both components via the two secure Bluetooth® wireless links you have established, and will seamlessly manage the in-vehicle flow of your email, calls and other information during each iLane session.

When you exit your vehicle, iLane communications automatically stop and your smartphone resumes normal operation outside the vehicle.

Here is a brief example of how iLane manages an incoming email and a response using the two Bluetooth wireless links in a typical iLane system – see Figure 1 and Figure 2:



GETTING ACQUAINTED

- (1) In Figure 1 below, one or more messages arrive on your smartphone and are detected by iLane while you are driving.
- (2) iLane announces the new messages through your vehicle's hands-free system and speakers, and awaits your response.
- (3) Choose from dozens of simple voice commands – for instance, say **Read Message** to hear message content.



Figure 1. Receiving and Opening a Message

- (4) See Figure 2 below. iLane reads the message aloud through your vehicle's hands-free system and speakers.
- (5) Respond to iLane as you wish – say **Reply**, **Delete**, **Forward**, **Call Back**, or many others.
- (6) iLane relays your response to your smartphone, where the action is completed.

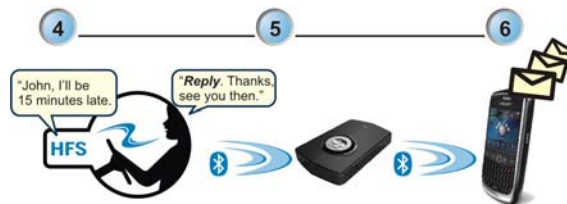


Figure 2. Reading and Responding to a Message

GETTING ACQUAINTED

1.3 What's in the Box?



GETTING ACQUAINTED

1.4 You'll Also Need...



Your Smartphone

- Bluetooth-enabled
- with valid email address
- with Internet access



- iLane account
- *iLane Gateway* application



Your Bluetooth Hands-Free System

* Choose from:


- the iLane headset (available separately)
- OR*
- an in-vehicle Bluetooth hands-free system (factory-installed or after-market kit).

Please note that basic instructions for iLane account setup, *iLane Gateway* downloading and all pairing are provided in the *iLane Quick Start*. For further details, please also see Section 3.1 in this guide (page 24).

1.5 Compatibility in Your Vehicle

Your own Bluetooth *hands-free system* (HFS) is your primary interface with iLane, relaying iLane prompts and your voice commands – you will listen to iLane through your HFS speakers, and you will talk to iLane through your HFS microphone. Choose one of the hands-free systems listed below, whichever best suits your needs for convenience and performance:




- a Bluetooth wireless headset such as the iLane BlueAnt z9i option
– OR –
- an in-vehicle Bluetooth wireless system (factory-installed or aftermarket kit)

 **NOTE:** For clarity in illustrations, the hands-free system graphic shown at right and throughout this guide represents the headset or in-vehicle HFS of your choosing.



1.6 Where to Install

Keep in mind a few minimum requirements when securing iLane in your vehicle:

- For best results, complete iLane setup and Bluetooth™ pairing prior to any permanent mounting – see Section 3.
-  Ensure that safe entry, exit and operation of the vehicle is not jeopardized by any part of your iLane system.
-  Secure iLane in place – avoid driving with components “loose” in the vehicle interior.
-  Secure the iLane power cable away from doors, pedals, steering column, windshield, mirrors, gearshift, or other moving parts.
- iLane does not need to be accessible during normal operation, and should be kept out of direct sunlight.
- It is good practice to store iLane out-of-sight, such as in a locked glove box, to discourage theft.

This section describes iLane's basic features, use of connectors, buttons, LEDs, and your hands-free system (HFS).

2.0 Feature Summary

INSTALLATION / CONNECTION

- Simple plug-in without tools or batteries; compact design for easy storage and portability
- Quick online activation and auto-install of *iLane Gateway* smartphone application
- Narrated setup easily integrates iLane with your smartphone and hands-free system

COMPATIBILITY

- Compatible with BlackBerry operating systems (BBOS) 4.1 – 6.0.x¹
- Compatible with BlackBerry Enterprise Server (BES) 4.1.5 – 5.0.x
- Compatible with popular in-vehicle hands-free systems (HFS)
NOTE: Please consult your HFS documentation for supported features and operation.
- Two Industry-standard USB interfaces: High-speed Type-A USB 2.0 and micro-AB On-The-Go (OTG) *NOTE: OTG is not currently supported.*

PERFORMANCE

- Voice-based operation with seamless and silent auto start/stop, and timely notifications
- Intelligent pre-processing of incoming messages for optimized clarity and expression
- Listen to email, new SMS or PINs, today's calendar, news and weather, and calls
- Manage incoming calls with a voice command (or HFS button, if supported)
- Place calls conveniently with *Call By Name*, *Call By Number* or *Redial*
- Reply to emails with a text template, call, or VoiceNote (mp3 attachment)
- Reply to SMS/text messages with a phone call or (optional) an *iLane Talk 2 TXT* message
- Re-read SMS/texts received during your current iLane session
- Pause-and-resume for returning to an interrupted message or news article
- Mark an opened email message as "unread" for easy access later
- Cancel or "escape" from most sending/calling actions and other common activities
- Access up to 5000 different Contacts in your smartphone Address Book
- Authentication and encryption for secure email communication
- Choice of *Standard* prompting (maximum help) or *Expert* prompting (minimal help)
- Silent modes for subtle behind-the-scenes monitoring at start-up and on request
- Spoken context-sensitive help (*Options*) as well as direct web/phone tech support

¹ See www.ilane.com for current information about compatible smartphones, operating systems and hands-free systems.

KNOW YOUR iLANE


2.1 Status Lights and Buttons

STATUS LIGHTS

iLane's status lights (a.k.a. *LEDs*, or *light-emitting-diodes*) indicate current operating conditions regarding power, Bluetooth wireless links to your smartphone and hands-free system, audio activity, system errors and more. These LEDs are particularly helpful when confirming your initial system setup/pairing progress, or for troubleshooting unexpected behavior – you will not need to consult iLane LEDs for day-to-day use.

To minimize distraction in the vehicle, the brightness of these lights auto-adjusts to suit changing ambient light levels. They will brighten in daylight, and will gradually dim as darkness sets in.

Two identical *Power* lights are typically “ON” during every iLane session.

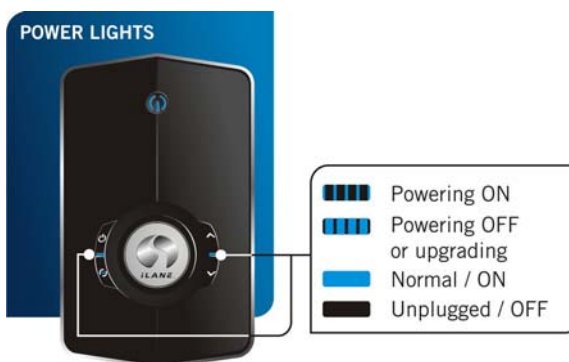

For all other conditions, check the 3 *Connectivity and System* lights located near the top edge of iLane.

KNOW YOUR iLANE




These 3 LEDs describe iLane's current wireless connections to your smartphone (for communications) and hands-free system (for audio), as well as iLane's current operating mode and voice command activities. Refer to the chart below for various conditions you may encounter:

READING ALL LIGHTS

SMARTPHONE	SYSTEM and VOICE COMMANDS	HANDS-FREE SYSTEM				
<ul style="list-style-type: none"> Smartphone OK Phone call Data transfer Pairing mode Connecting... Smartphone missing 	<ul style="list-style-type: none"> System OK / Ready Voice command * <i>Do Not Disturb</i> mode, or System Off * System Failure 	<ul style="list-style-type: none"> Hands-free OK User-iLane interaction Data transfer Pairing mode Searching... Connecting... Hands-free system missing Never paired 				
<h4 style="margin: 0;">LEGEND</h4> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;"> or = Flashing</td> <td style="width: 50%;"> or = Full on</td> </tr> <tr> <td> or = Slow blink</td> <td> or = Full off</td> </tr> </table>			or = Flashing	or = Full on	or = Slow blink	or = Full off
or = Flashing	or = Full on					
or = Slow blink	or = Full off					

KNOW YOUR iLANE


Common conditions you may notice during use are shown at right.

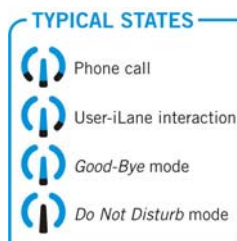

BUTTONS

iLane includes four multi-purpose buttons for convenient shortcuts to device wake-ups, recoveries, adjustment of local settings, manual on/off, volume control, and other infrequent but crucial functions. In some cases, an iLane button press simply offers an alternative to a voice command or hands-free control.

Button behavior varies depending on iLane's current state. See below for a complete list of all button functions:



= POWER

- ❑ Turn iLane **ON** (required after “deep sleep” mode)
- ❑ Turn iLane **OFF** (hold 3 seconds)
- ❑ **Exit** the *System Menu*
- ❑ **Reject** an incoming phone call
- ❑ **Hang up** (end) current call
- ❑ **“Wake-up”** from deep sleep power-save mode

KNOW YOUR iLANE

= SELECT

- Ensure** “Pairing Mode” during iLane setup procedure
- Answer** an incoming phone call
- Transfer** call to your smartphone
- “Wake-up”** from *Do Not Disturb* or *Good-Bye* (e.g., to activate iLane at start-up)
- Open** the *System Menu* (NOTE: hold for 3 seconds)
- Select / Save** a *System Menu* option
- Reset** iLane memory (NOTE: hold for 3 seconds in *System Menu* when prompted)

or = MORE / NEXT or LESS / BACK (ARROW BUTTONS)

- Volume** control for internal iLane speaker. (NOTE: Adjust during use while outside of *System Menu*)
- Navigate **up / down** within *System Menu*
- Increase / decrease** a *System Menu* option

2.2 Connections

POWER

iLane's power jack connects to the 12/24V accessory power outlet in your vehicle via the iLane power cable/adaptor provided. For best results, simply keep iLane plugged in. Depending on your vehicle, you may have to turn the ignition key slightly to power this circuit.



KNOW YOUR iLANE

USB

The two USB ports located on iLane's right side provide a convenient way to link iLane to other devices such as a USB storage device for downloading the latest *iLane Platform* (a.k.a. *iLane VIAS*) software release to iLane.

For an On-The-Go (OTG) update at your PC, connect iLane's micro-AB USB cable (provided) and copy the new *iLane Platform* (a.k.a. *iLane VIAS*) software release files to iLane.

The OTG cable carries both data and power.

NOTE: Currently not supported.



Alternatively, you can update iLane while it is connected to your vehicle:
Connect a 3rd-party USB storage device containing the latest *iLane Platform* (a.k.a. *iLane VIAS*) software release, then power up iLane.

IMPORTANT
Do not unplug power or USB during file transfer.



MICROPHONE JACK




iLane's microphone jack (located adjacent to the USB ports) is not currently supported.

KNOW YOUR iLANE

OTHER


iLane's *expansion port* (located adjacent to the power jack located on iLane's bottom edge) and nearby *SD card* are both protected by iLane's bottom cover. See right.

NOTE: Currently not supported.

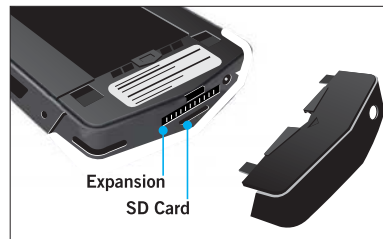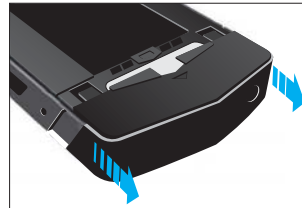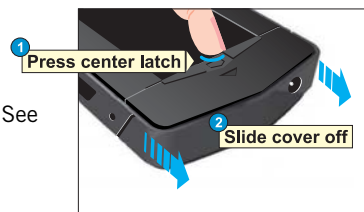

KNOW YOUR iLANE

2.4 iLane and Your Hands-Free System (HFS)

 **NOTE:** Consult your HFS documentation for supported features and performance.

Once iLane is set up and paired as described in the iLane *Quick Start* or in Section 3 of this manual, your own wireless hands-free system (HFS) manages audio to and from iLane. Whether you prefer to use the iLane headset option (available separately) or your own factory-installed or 3rd-party aftermarket Bluetooth hands-free system, you will speak through your HFS microphone and listen through your HFS speakers.

PAIRING TO YOUR HANDS-FREE SYSTEM

Pairing iLane to your hands-free system is your final setup step – see the iLane Setup Procedure (see page 24) and/or the *Quick Start* provided with iLane. Although some specific “how-to” pairing tasks depend on your chosen HFS, the overall pairing process is the same:

- (1) Familiarize yourself with your hands-free system and how to start its pairing mode.
- (2) Pair iLane to your smartphone *before* pairing iLane to your HFS.
- (3) When ready, activate/start “pairing mode” (a.k.a. “discovery mode”) on your HFS. Be aware that some HFS pairing modes last for limited time.
- (4) Make sure iLane is also in pairing mode so that it can detect your HFS.
- (5) Use your smartphone to choose and accept the proper HFS pairing.
- (6) iLane and your HFS should auto-connect to each other from now on.

USING YOUR HANDS-FREE SYSTEM

After setup, iLane audio activity transmits through HFS audio components. iLane’s own button shortcuts (for calls, “waking” iLane, using the *Good-Bye* and *Do Not Disturb* modes, and more) can typically be accessed using similar control buttons provided on

KNOW YOUR iLANE

your hands-free system. Since availability and performance can depend on what HFS you are using, please consult the product documentation supplied with your HFS.

See also *Good-Bye* and *Do Not Disturb* modes (page 35).

This section provides detailed step-by-step setup instructions for new iLane users. It supplements the iLane *Quick Start*.

3.0 Setup Summary

To set up iLane, you will first download *iLane Gateway* software to your smartphone then *pair* iLane to both your pre-configured smartphone and your chosen hands-free system (HFS). Pairing creates the two secure Bluetooth wireless communications links unique to your iLane, so the linked components can auto-discover, recognize and communicate with iLane for all future use.

The iLane device is ready for setup right out of the box. Simply ensure that your account is *activated*, then complete the following three steps to begin using iLane:

1 **DOWNLOAD *iLane Gateway* software to your smartphone.** Use your smartphone to create your iLane account at my.iLane.com, then install the *iLane Gateway* smartphone application required for your smartphone model. Also ensure that your smartphone is in Bluetooth mode but “disconnected” from all other Bluetooth devices you may have (such as a headset or your in-vehicle HFS).

NOTE: *If you have already created your iLane account and downloaded iLane Gateway to your smartphone, skip to Step 2. Each iLane user needs only **one** iLane account and **one** installation of iLane Gateway software.*

2 **PAIR iLane to your smartphone.** Connect iLane to your vehicle for power, then *pair* iLane to your smartphone so that iLane can detect and communicate with it for all future use in your vehicle.

3 **PAIR iLane to your hands-free system.** After pairing iLane to your smartphone, pair iLane to your HFS so that iLane can detect it and communicate with it for all future use in your vehicle. Note that if you


HOW TO SET UP iLANE

have chosen to use the iLane headset option with iLane, this pairing step is typically automated.

3.1 iLane Setup Procedure

These setup instructions will get you on the road with iLane in just a few minutes. Follow this procedure if:

- you are a new user and/or have just created/activated your iLane account
- you have *reset* iLane (which restores factory defaults and clears pairing information)
- you need to re-pair both components to iLane
- additional users (max. 6 recommended) wish to use a single iLane device

 **NOTES:** **1)** Due to differences in smartphones, your screen displays and prompts may not be exactly as shown. **2)** The HFS icon shown in the setup procedure represents the in-vehicle HFS option of your choice.

A FEW TIPS BEFORE YOU BEGIN:

- Activate (turn on) your smartphone's Bluetooth option. Typically you can find this setting here:

→Options

→Bluetooth

→Bluetooth Options

→Enable Bluetooth

Your smartphone must remain in Bluetooth mode for all iLane setup and use, otherwise the two devices will not be able to pass information to and from each another.




HOW TO SET UP iLANE

- ❑ *Disconnect, disable or delete* any previous Bluetooth pairing (i.e., communication link) you may have established between your smartphone and another device, such as a headset or your in-vehicle hands-free system. The other device may interfere with iLane setup by attempting to reconnect with the smartphone. On most smartphones, look for these paired devices in **Bluetooth Options**.




- ❑ iLane will access your smartphone's Address Book (contacts) during setup and use. You may wish to first copy any SIM contacts to your Address Book so that you can immediately access them with iLane too.
- ❑ Locate the web browser on your smartphone – typically the browser is represented by a “globe” icon on the main applications page. Your smartphone requires internet access for iLane setup and use.



 **NOTE:** Access to smartphone Bluetooth options and internet features may vary according to smartphone model. Please consult the product documentation supplied with your smartphone if you need help.

- ❑ Familiarize yourself with your chosen hands-free system so that it is prepared for iLane setup and use. For example, if using the iLane headset make sure it is fully charged; if using an in-vehicle Bluetooth wireless system or kit instead, make sure you can enable its pairing mode.

STEP 1 : DOWNLOAD iLANE GATEWAY SOFTWARE

 **NOTE:** Skip this step if you have already created your iLane account at my.iLane.com (or through an online purchase) and have downloaded iLane Gateway to your smartphone. Each user needs only **one** iLane account and **one** installation of iLane Gateway.

HOW TO SET UP iLANE

Before you can introduce iLane to your smartphone, you must install *iLane Gateway* software on your smartphone. To obtain this application, you will first need an iLane account. Use your smartphone for both tasks – create the account and download software as described below:

1.1 GO TO MY.iLANE.COM or iLANE.COM


Open your smartphone's web browser. At the "Go To" prompt, type in <http://my.iLane.com> – this link will take you to the *Login* page for my.iLane.com. Alternatively, at the "Go To" prompt type in <http://iLane.com> – this will take you to the www.iLane.com home page.



1.2 CREATE YOUR iLANE ACCOUNT

NOTE: *Already have your iLane account? Log in and skip to Step 1.3.*

On the *Login* page of my.iLane.com (or on www.iLane.com home page) click **Create Account**.

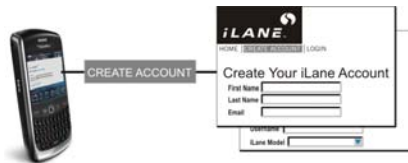

On the *Create Your iLane Account* page, enter all required information including your full name and email address for the smartphone you wish to use with iLane. Choose a memorable iLane *Username* for your future iLane account logins.




IMPORTANT



Make sure the email address you define for your iLane account is one that reaches your smartphone.


HOW TO SET UP iLANE

 **NOTE:** Your iLane account enables you to obtain iLane software and other supporting information released over the life of iLane.


Follow the prompts to read and accept the *iLane Web Portal Agreement*, then click the **Create Account** button to finish and submit your iLane account form.




Watch for a *Welcome to iLane* email sent from IMS or support@iLane.com – check Junk Email if necessary. Follow the instructions and links in the email to log into your account and continue iLane setup.

 **NOTES:** **1)** Contact Technical Support if the email does not arrive. **2)** For security, remember to change your temporary password after your first login.

1.3 DOWNLOAD SOFTWARE

 **NOTES:** **1)** If you already installed current iLane Gateway software on your smartphone, skip to Step 2.1. **2)** Downloading incurs a data usage charge. **3)** With newer smartphones, you may have to grant iLane permissions prior to the download process – see Step 1.4 (next page).


At my.iLane.com, find *Downloads* and select *iLane Gateway*. Follow the prompts to read and accept the *iLane End User License Agreement* required for the use of *iLane Gateway*, and click **Continue**.

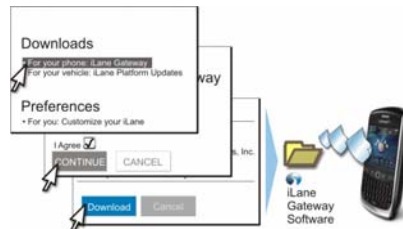


Enable/save any permissions requested by your phone at this time (see next page), and/or click **Download** to begin downloading *iLane Gateway* to your smartphone. Wait approximately 45 seconds as

HOW TO SET UP iLANE

your smartphone and operating system are auto-detected and the corresponding *iLane Gateway* version is installed.


When the installation is complete, click **OK**. The *iLane Gateway* icon  will also be added to your smartphone's *Applications* page.


Re-boot your smartphone if prompted .


NOTE: Typically a re-boot is required if a version of iLane Gateway was previously installed on your smartphone.




1.4 GRANT RIGHTS to iLANE

 *NOTE: May not be exactly as shown. All screens will vary with smartphone model, and may appear before the download begins.*


If/when prompted, **View** any permission changes requested by *iLane Gateway* .

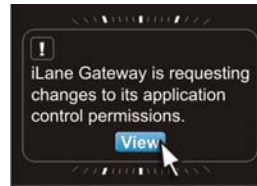


As prompted, say **Yes** or **Allow** for all permissions .

These settings define *iLane Gateway* as the trusted controller or server – i.e., *manager* – for all *in-vehicle* communications to and from your smartphone. Note *iLane* also requires access to *my.iLane.com*.



Make sure to **Save** all changes . *iLane* permissions apply *only* when you are using *iLane*. *iLane* management is



HOW TO SET UP iLANE

relinquished upon exiting the vehicle, or whenever you end an iLane session; your smartphone then resumes normal operation.

STEP 2 : PAIR iLANE TO YOUR SMARTPHONE

2.1 CONNECT iLANE to YOUR VEHICLE

Using the iLane power cable provided, connect iLane's power port to your vehicle's 12/24V accessory outlet (i.e., cigarette lighter outlet) as shown.



Wait as iLane initializes.

When power-up is complete, iLane's dual *Power* LEDs will stop blinking and remain steadily **BLUE**.

TIP: *In some vehicles, you may have to turn the ignition key slightly to power this accessory circuit.*


Approximately 45 seconds after plug-in, you should hear iLane's first prompt.


"Can you pair me to your phone please? My passkey is four zeros."




HOW TO SET UP iLANE

2.2 ENABLE PAIRING MODES

On **iLane**, press  (Select) to ensure iLane is in Bluetooth *pairing* mode, a.k.a. *Discoverable* mode. iLane's *Smartphone* status LED will be steady **GREEN** and nearby Bluetooth devices such as your smartphone will be able to detect iLane's special signal.

 **NOTE:** “Discoverable” mode is launched automatically upon iLane's initial power-up.

On your smartphone, go to *Bluetooth Options* and select “Add Device” (or similar) to activate the pairing process.

 **NOTE:** For help with selecting Bluetooth features on your smartphone, consult the product documentation provided with that device.



2.3 SELECT “iLANE” ON YOUR SMARTPHONE

Your smartphone should detect iLane with 30 seconds.

Select “**iLane v2.0**” (or higher, as displayed) from the list of Bluetooth devices found and displayed on your smartphone, and enter the iLane passkey (PIN) of **0000**. This pairs iLane to your smartphone.



HOW TO SET UP iLANE

2.4 ESTABLISH CONNECTION

When prompted, make sure to enable the “**Don’t ask this again**” checkbox and accept iLane’s connection request. This permission enables future auto-connect and communications between the paired devices as intended. **It is required for all iLane use.**



Wait for the “sync” process to share your Contacts and other smartphone information with iLane. As a rule-of-thumb, 5000 contacts will require approximately 10 minutes transfer time.

When pairing is complete, iLane’s *Smartphone* status LED will be steady **BLUE**. Congratulations – iLane and your smartphone are now communicating!



NOTES: **1)** *Smartphone SIM contacts are not transferred unless you have first copied them to your smartphone’s Address Book.* **2)** *If pairing was unsuccessful, remove any previous pairings from your smartphone and try Step 2 again.*

STEP 3 : PAIR iLANE TO YOUR HANDS-FREE SYSTEM (HFS)


3.1 ENABLE HFS PAIRING MODE

NOTE: *The HFS icon shown here represents the Bluetooth wireless hands-free system (HFS) of your choice, such as your in-vehicle system or kit.*

Enable your hands-free system’s (HFS) *pairing* mode as instructed in the documentation supplied with the HFS.

HOW TO SET UP iLANE

3.2 ENABLE iLANE's PAIRING MODE


On iLane, press  to begin searching for the HFS. Note iLane's *Hands-Free System* status LED will flash **GREEN / BLUE**. Allow a few moments for iLane to detect your hands-free system.





3.3 SELECT THE DESIRED HANDS-FREE SYSTEM

iLane will notify your smartphone of all nearby Bluetooth devices detected. From the list of devices displayed on your smartphone, select the HFS you wish to use with iLane.

Enter the proper HFS passkey (PIN) as defined for that system.

 **NOTE:** Pairing iLane to your hands-free system may be automated, depending on the system you have chosen and whether or not other Bluetooth devices are also currently in range. Monitor with your smartphone.

When successfully paired, iLane's *Hands-Free System* status LED  will be steady **BLUE**. You will hear iLane say "Connected." through your hands-free system.

 **NOTE:** If pairing is unsuccessful and iLane did **not** detect your hands-free system, make sure iLane is still properly paired and connected to your smartphone, and that you have the correct HFS passkey/PIN. Then repeat all of Step 3.



This section explains use of your iLane system for email and other messages, phone calls, daily Calendar, and on-demand news and weather.

NOTE: Please also consult the documentation provided with your HFS for equivalent operating controls that may apply.

4.0 Powering Up / Down

AUTO-START / STOP

For seamless startups, simply keep iLane plugged into your vehicle.

TIP: Remember that your smartphone's Bluetooth option must also be enabled (turned on) for all iLane use.

When iLane is out-of-range or off, such as when you exit the vehicle, your smartphone resumes normal operation.

MANUAL START and POWER DOWN


If your vehicle does not maintain constant power to the accessory circuit after the ignition is turned off, or if you used **⏻** to turn iLane off, press **⏻** to manually turn iLane **ON**. This button press also will wake iLane from a "deep sleep" mode (see below). To manually turn iLane **OFF**, hold **⏻** for 3 seconds.

4.1 Deep Sleep and "Wake Up"


DEEP SLEEP

iLane's "deep sleep" state draws virtually no power from your vehicle. This power-save mode begins when you manually turn iLane off (using **⏻** button). It also begins 60 minutes after any of the following conditions:


- Smartphone or HFS are turned off
- Smartphone's Bluetooth option is off
- Smartphone or HFS (such as a Bluetooth headset) exit the vehicle

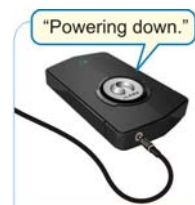



WORKING WITH iLANE

 **NOTE:** Leaving your smartphone (or HFS) powered up within the vehicle normally prevents iLane's "deep-sleep" mode.

"WAKE UP"

In some vehicles, you can simply turn the ignition to wake iLane from deep sleep mode, assuming your smartphone and HFS are also powered up. In other vehicles, you must press iLane's  button.

4.2 Volume

To adjust iLane's own internal speaker volume, press  or  during iLane use (but when outside of System Menu). Hold for continued adjustment as desired. For all other volume through your hands-free system, adjust using the HFS controls provided with that system.

4.3 The Basics



GENERAL

iLane intelligently manages your incoming and outgoing email, incoming SMS/text messages, PIN messages, phone calls, and today's Calendar events whenever your smartphone and HFS are both in the vehicle and powered up. iLane can also provide on-demand news and weather reports in your areas of interest.

You can choose to listen to iLane as much or as little as you like, and you can interrupt with a voice command at any time.

STARTING YOUR iLANE SESSIONS

iLane begins a new session when you enter the vehicle with your iLane-paired smartphone and iLane-paired hands-free system. In some vehicles, you may have to turn the ignition on first.


 **NOTE:** Depending on your vehicle, if iLane is in "deep sleep" power-save mode you may have to press  to power up iLane.


WORKING WITH iLANE


After iLane says “Connected”, *Good-Bye* mode begins (see below).

3 OPERATING MODES


- **Active** mode: Using *Active* mode enables voice commands. This allows you to work as intensely as possible, with iLane responding to your requests as well as checking your Inbox, and announcing new incoming messages, calls, and appointments. Note there is no voice command for starting *Active* mode – it resumes automatically when you cancel “Good-Bye” or “Do Not Disturb” modes.

 *TIP: Say “Quiet” to immediately stop iLane’s current speech but remain in active mode with voice commands and prompting still enabled.*


- **“Good-Bye”** mode (voice command, and iLane’s default start-up mode as of v2.1 [i.e., since March 2010]): Say “Good-Bye” when you wish to speak freely but still monitor incoming messages, calls and events. iLane ignores voice commands and remains silent until a new message (or call or calendar reminder) arrives, or until you press  – iLane’s active mode will then resume.

 *NOTE: If you are using a 3rd-party hands-free system, you can typically use the HFS Redial feature or main control button to cancel “Good-Bye” mode. Depending on the specific HFS, you may have to enter iLane’s standard phonebook number **45263** (“i-L-a-n-e”) first. Alternatively, dial **5555-45263** or **011-45263**. Not supported in all HFS – please check your HFS documentation.*

It is important to note that iLane *begins* in *Good-Bye* mode – voice commands are conveniently disabled as you settle into your vehicle.

- **“Do Not Disturb”** mode (voice command): Say “Do Not Disturb” to essentially shut down iLane except for incoming calls – you will no longer be notified of incoming messages or appointments. iLane ignores voice commands and remains silent until you press , at which point iLane’s active mode resumes.

WORKING WITH iLANE

 **NOTE:** If you are using a 3rd-party hands-free system, you can typically use the HFS Redial feature or main control button to cancel “Do Not Disturb” mode. Depending on the specific HFS, you may have to enter iLane’s standard phonebook number **45263** (“i-L-a-n-e”) first. Alternatively, dial **5555-45263** or **011-45263**. Not supported in all HFS – please check your HFS documentation.

LET iLANE HELP YOU!


For brief context-sensitive help with your current task, or for a summary of iLane’s main commands, say **Options**. iLane will describe what to do next in order to complete the current task, and/or will list valid voice commands.

USE CANCEL TO “ESCAPE”

Changed your mind? While sending a message, placing a call or checking news or weather, say **Cancel** to escape. iLane will stop and request new instructions. See page 49 for a list of common actions that you can cancel/stop.

ENDING AN iLANE SESSION

To end the current iLane session so that iLane ignores all voice commands and does not announce anything – incoming messages, events or calls – do one of the following:


- Turn off your smartphone or hands-free system.
- Remove your smartphone and HFS from the vehicle.
- Turn off (disable) your smartphone’s Bluetooth option.
- Hold  for 3 seconds to turn iLane off.

4.4 Receiving Messages

iLane offers several easy ways to check your Inbox. For seamless up-to-the-minute access all the time, you can simply let iLane announce each new message (or Calendar reminder) when it arrives in any of the Inboxes (email accounts) you may have on your smartphone. In addition, you can check or browse for messages


WORKING WITH iLANE

yourself, perhaps filtering for older email messages that you may have skipped in the past or which you wish to re-read.

 **NOTE:** *If you have multiple Inboxes (email accounts) and/or subfolders defined on your smartphone, iLane seamlessly manages them as a single Inbox.*



START-UP WITH NEW MESSAGES

iLane does not check your Inbox at start-up. Instead, iLane moves directly to *Good-Bye* mode, with voice commands and prompts disabled until arrival of a new message, call or appointment reminder. **NOTE:** *If a new message arrives, iLane will also announce any new messages that were present at start-up. If a call or reminder arrives, iLane simply auto-resumes Good-Bye mode.*

To actively check your Inbox at start-up, press  (or use your hands-free system/headset); iLane will then find new Inbox emails, including those that were present at start-up, and will respond to voice commands.

FINDING OUT WHEN A NEW MESSAGE ARRIVES

After start-up, iLane begins to monitor your Inbox and chimes to announce each arrival of an email or SMS/text message. iLane also identifies the sender and subject. Say **Read Message** at any time during or after this announcement—iLane will read the message aloud through the headset (or HFS, if using).

 **TIP:** *If iLane appears to be ignoring you and is not reporting new messages, you may be in "Do Not Disturb" mode. Press the  button or click the main button on your headset or HFS to recover—iLane will resume its active mode of listening/responding.*

FINDING NEW MESSAGES ONLY

To find only the messages that have arrived since your last opened message, say **Check Messages** during an active iLane session. iLane will ignore older unopened (unread) emails still in your Inbox.

WORKING WITH iLANE

FINDING UNOPENED MESSAGES

To browse all unopened (unread) email within the last 14 days, say **Browse Unopened**. iLane begins with the newest unopened message, and will ignore any opened messages. Unopened SMS/texts delivered during the current iLane session (or up to 5 minutes prior) are also included.

FINDING ALL MESSAGES

To browse your entire Inbox – including all emails, plus any SMS/texts delivered during the current iLane session (or up to 5 minutes prior) – say **Browse**. iLane begins with the newest message, and reads all *opened* and *unopened* messages.

MOVING THROUGH YOUR INBOX

When checking your Inbox, iLane begins with the newest message and responds to a **Read Message** command. For each email, you can respond as desired (reply, forward, call back, delete, etc).

Say **Next Message** (older) or **Previous Message** (newer) to move on.

STARTING AT A SPECIFIC MESSAGE

To resume reading a specific message that you interrupted with another task or with the “Quiet” command, say **Continue Messages**. iLane will return to the subject line (header) of the interrupted message. See also 4.9, *Pausing iLane* on page 47.

SKIPPING A MESSAGE: EMAIL and SMS/TEXTS

EMAIL: To ignore an incoming email instead of reading it, remain silent or say **Next Message** or **Previous Message** to move on. The message will remain in your Inbox for future access.

SMS/TEXTS: To ignore an incoming SMS/text instead of reading it, remain silent or say **Next Message** or **Previous Message** to move on. The SMS/text will remain in your Inbox for access anytime during the current iLane session. *NOTE: After iLane shutdown, the*


WORKING WITH iLANE

message is accessible directly from your smartphone as usual; old SMS/text messages are not retained in future iLane sessions.


READING AN EMAIL OR SMS/TEXT

When iLane announces a message, say **Read Message** to open it. Listen to as much or as little as you like. To listen to the message again, say **Read Again**. Say **Quiet** (or another main command such as **Check Calendar**) to stop reading mid-message and insert a bookmark for returning to this message later in your iLane session.

READING AN ATTACHMENT

 **NOTE MINIMUM REQUIREMENTS:** You must have BlackBerry Operating System v5.0 and iLane Gateway v1.3.0.874 (or higher) on your smartphone, and iLane Platform/VIAS v2.2.1 (or higher) on your iLane device.

iLane lets you know if an incoming email includes a VoiceNote attachment (.mp3 recording) originating from another iLane user. Say **Read Message** as usual, and wait for completion of the 10-20 second download process – this will add the VoiceNote to iLane’s temporary memory and start the playback. While you listen to the VoiceNote, any message ‘body text’ that may be present in the email continues to download in the background – iLane will read this additional text aloud when fully downloaded (and after reading the VoiceNote). For convenience, downloaded content remains local for the rest of your iLane session; manage a VoiceNote message as you do other Inbox messages. For complete operating details, refer to the *ADDENDUM: iLane-to-iLane VoiceNotes™* available at www.iLane.com *Support* pages.

 **NOTE:** iLane recognizes only the unique “voicenote.mp3” file attachment generated by another iLane; larger and/or incompatible formats from other sources are ignored.

MARKING AN EMAIL AS UNREAD

To flag an email for easy access in the future, say **Mark As Unread** while iLane is announcing or reading the message (or directly

WORKING WITH iLANE

after). iLane will acknowledge the change in status, and the email will be identified as an unopened message in your Inbox.

DELETING AN EMAIL

Say **Delete** to remove the current email message from your Inbox. iLane will request a confirmation.

4.5 Sending Messages


iLane offers several choices for sending a message. You can choose to reply to the current sender, forward an email to someone else, or simply create a new message. You can also cancel such actions anytime prior to your final **Send Message** command.

REPLYING VIA EMAIL


Say **Reply** to respond via email to the sender of the current email message. Then follow the prompts to either record a *VoiceNote* (sent as an .mp3 attachment heard by the recipient), or to select and send a pre-defined *iLane text template* (email). For example:

- (1) As iLane announces or reads a message, say **Reply** to respond.
- (2) iLane asks if you wish to respond with a VoiceNote (attachment) – say **Yes** and skip to (3) below. Or say **No** and listen further:
 - Should I send a message that you are in transit and will get back to the sender as soon as possible?
(NOTE: If “**Yes**”, this email is sent immediately)
 - Should I ask (Contact name) to call you?
(NOTE: If “**Yes**”, this email is sent immediately)
- (3) If you decide to compose a VoiceNote, begin speaking when prompted. iLane automatically ends your reply with a timed audible cut-off or when you pause briefly and say “Good-bye”, whichever comes first. Or, simply end your reply with a click of the headset (or HFS button, if supported).

WORKING WITH iLANE


 **NOTES: 1)** The maximum length of a VoiceNote depends on your smartphone's operating system. See Specifications on page 59. **2)** For best results, review your reply before sending – say **Review Message** to make sure your message is complete.

- (4) If desired, say **Record Again** and repeat Step 3. When satisfied with your VoiceNote, **Send Message** to send the email. If you change your mind and decide not to send it, say **Cancel**.
- (5) The recipient of your email-with-VoiceNote will need an .mp3-compatible device to listen to the attachment.


 **NOTES: 1)** You can review and/or cancel a VoiceNote draft (.mp3) if desired, whereas a pre-defined text template transmits immediately and cannot be reviewed, modified and/or cancelled. **2)** To reply to an SMS/text message, say **Call Back** or (with optional iLane Talk 2 TXT) **Reply** – iLane does not support email responses to text messages.

REPLYING VIA A PHONE CALL

Say **Call Back** to call the sender of the current email or SMS/text.

 **NOTE:** The sender's email address and phone number must be in your Address Book.

REPLYING TO AN SMS/TEXT MESSAGE (iLANE Talk 2 TXT)


 **NOTES: 1)** Requires iLane Platform/VIAS v2.4 (or higher) and iLane Gateway 1.3.1.883 (or higher). **2)** Requires iLane Talk 2 TXT option and acceptance of the iLane Talk 2 TXT End User License Agreement. **3)** See my.iLane.com for details about Downloads and Preference options.

Say **Reply** to send an SMS/text in response to an incoming SMS/text:

- (1) Say **Reply** during the current SMS/text.
- (2) Follow the prompts to record your message. iLane will chime to indicate the maximum time limit of 6.5 seconds.

WORKING WITH iLANE

- (3) Listen as iLane replays the recording, then wait as iLane begins the transcription process to change your speech into text.
- (4) Listen as iLane reads the transcribed text message draft. Say **Send Message** to send it. Or, if you wish to change the message say **Record Again** and repeat Steps 2-3. If you change your mind, say **Cancel**.


Newer smartphone models identify each *iLane Talk 2 TXT* message with a special icon ().

FORWARDING an EMAIL

Say **Forward** to redirect the current email message to a different contact or distribution list in your Address Book. Say **Cancel** if you change your mind.

COMPOSING A NEW EMAIL MESSAGE

At any time, say **Compose Email** to record a brief VoiceNote. iLane will request the contact's name, then prompt you to begin recording your message. To conclude your message anytime before the timed cut-off, either pause briefly and say "Good-bye", or click the main button on the iLane headset (or HFS, if supported). Say **Review** to listen to your draft – say **Record Again** to try again. When satisfied with the content, say **Send Message**. Your contact will receive an email entitled *In-vehicle Message* which includes your voice recording – *VoiceNote* – in an .mp3 attachment that they can listen to.

 **NOTES:** **1)** The contact name and email address must be in your Address Book. **2)** The maximum length of a VoiceNote depends on your smartphone's operating system. See Specifications on page 59. **3)** The recipient will need an .mp3-compatible device in order to listen to the attachment.


WORKING WITH iLANE

REVIEWING, CHANGING and/or CANCELING YOUR VOICENOTE

Say **Review** to listen to your current voice recording before sending it. Say **Record Again** to erase the recording and draft a new version.


Say **Cancel** to discard your recorded message instead of sending it. iLane will then request new instructions.

COMPOSING A NEW SMS (iLANE Talk 2 TXT)

 **NOTES:** **1)** Requires iLane Platform/VIAS v2.4 (or higher) and iLane Gateway 1.3.1.883 (or higher). **2)** Requires iLane Talk 2 TXT option and acceptance of the iLane Talk 2 TXT End User License Agreement. **3)** See my.iLane.com for details about Downloads and Preference options.

At any time, say **Compose SMS** to send an SMS/text as follows:

- (1) Say **Compose SMS**.
- (2) Follow the prompts to choose a Contact and record your SMS message. iLane will chime to indicate the maximum time limit of 6.5 seconds.
- (3) Listen as iLane replays the recording, then wait as iLane begins the transcription process to change your speech into text.
- (4) Listen as iLane reads the transcribed text message draft. Say **Send Message** to send it. Or, if you wish to change the message say **Record Again** and repeat Steps 2-3. If you change your mind, say **Cancel**.

For convenience, newer smartphone models identify each **iLane Talk 2 TXT** message with a special icon ().

4.6 Checking Your Calendar

Say **Check Calendar** to listen to a list of meetings and appointments you have scheduled on your smartphone for the remainder of the day. Lane announces the start of each event and, if specified at time of booking, provides a reminder prior to the event.

4.7 Calls



Phone calls have priority over all other iLane functions. If you are on a call, iLane will not interrupt or try to interpret your conversation as a voice command. Likewise, if you are listening to email or news when a call comes in, iLane will ring and interrupt to ask if you want to answer – the current message or article will be conveniently “bookmarked” so that you can return after the call.

ANSWERING CALLS

By default, iLane continuously monitors your phone and notifies you of each incoming call, even when in *Do Not Disturb* mode. iLane identifies the caller (if a contact) or number (if not a known contact), and asks if you would like to answer. Typical prompts may include:


“From Jane. Do you want to accept the call?” — iLane has found the incoming caller’s telephone number in your address book.

“From 123-555-1234. Do you want to accept the call?”
— iLane does not recognize the caller.

In either case, say **Accept** (or **Answer**) to take the call, or **No** to ignore the call and direct the caller to your smartphone’s voice mail. Alternatively, use your own HFS (such as  and , depending on your HFS) to manage incoming calls.

WORKING WITH iLANE

Note that iLane recognizes a call only upon arrival. If you choose to ignore a call and the caller leaves a message, you can access that voice mail from your smartphone as usual. The message will not be accessible through iLane.

 **NOTES:** **1)** Incoming calls interrupt other iLane tasks that may be in progress. **2)** After a call, iLane resumes the previous operating mode.

OPTIMIZING CALL QUALITY


Use your HFS to adjust the volume of the caller's voice. For example, click the + or – headset volume control buttons if you are using the iLane BlueAnt headset.

Use your HFS to optimize your transmitted voice quality. For example, if you are using the iLane BlueAnt headset click the headset main button to choose the desired *voice isolation* mode – use “standard” unless background noise level is unusually high.

PLACING CALLS

iLane can place a call if you state either the desired contact name or a telephone number, or if you say **Redial**.

TO CALL: To place a new call at any time, say either **Call By Name** or **Call By Number**. iLane will prompt you for the required contact name or the telephone number.

 **NOTES:** **1)** Placing a call requires that iLane be in “active” mode. **2)** If you have multiple contacts with the same name, iLane will request confirmation of the full name. **3)** If a contact has multiple phone numbers, such as work, home and mobile, iLane asks which number to use.

TO CALL BACK: To call back the sender of an email or SMS message, say **Call Back** at any time during the message. If the sender is not a contact in your Address Book, iLane will offer **Reply** (email) instead.


WORKING WITH iLANE

TO REDIAL: To place a call to the number you last dialed during the current iLane session, say **Redial**.


CANCELING A CALL


If you change your mind when using **Call By Name**, say **Nobody** when iLane requests the name of the contact you wish to call. iLane will confirm that the call is cancelled. *Note: not available when using Call By Number.*

TRANSFERRING CALLS

To transfer a call to your smartphone, press . To transfer a smartphone call to iLane, use your smartphone's transfer feature and activate iLane.

ENDING CALLS

To hang up and end a call, click iLane's  button (or equivalent on your HFS, if supported). iLane will indicate continuation of your current iLane session.

 **NOTES:** **1)** If the call had interrupted reading of email or news, say **Continue Message** or **Continue News** to return to the interrupted message or article. **2)** If you were in "Good-Bye" or "Do Not Disturb" mode when the call came in, iLane will resume the mode after the call.

USING YOUR HANDS-FREE SYSTEM FOR PLACING CALLS

By default during iLane's initial startup, iLane copies your smartphone Contacts to your hands-free system's available memory. This "sync" process ensures that you can still use your usual HFS calling features during an iLane session, if desired. See also: *A Note About Accessing Your Contacts Via Your Hands-Free System* on page 53.

4.8 Checking News and Weather

Say **Check News** for a collection of current news articles sorted according to topics such as *Business, Sports, Technology* and more. Follow the iLane prompts to choose an area of interest, then specify which article you wish to listen to. Say **Next Article** or **Previous Article** to read other articles. You can temporarily interrupt news without losing your place – see 4.9, *Pausing iLane* (below) for details. Or you can simply **Cancel** a request for news during any headline or article.


Say **Check Weather** for a weather report. Follow the iLane prompts to hear the current weather conditions and upcoming daily forecasts for your city of interest. **Cancel** a weather report at any time during the report.

4.9 Pausing iLane

There are a number of reasons why you may wish to temporarily interrupt iLane, and several ways to do it. For example, you may need to suddenly concentrate on changing traffic patterns or poor road conditions. Or perhaps you simply want to briefly “pause” iLane during an email message so that you can efficiently answer a call or check your calendar without losing your place. This flexibility can help ensure that your iLane sessions are as safe and productive as possible.

SILENCING iLANE OUTSIDE OF EMAIL or NEWS

Say **Quiet** to immediately silence iLane. Unless you were listening to email or news, iLane will not recall this point of interruption.

 **NOTE:** See also 3 OPERATING MODES (page 35) for other commands that will silence iLane and/or prevent certain functions.

WORKING WITH iLANE

PAUSING DURING A MESSAGE OR NEWS ARTICLE

During a message or news article, any of the following commands or conditions will temporarily “pause” iLane. This stops iLane’s current speech and automatically inserts a bookmark for later recall:


- ❑ Say **Quiet**
- ❑ Say a command to switch to a different iLane activity. For example, say **Check Messages, Check Calendar, Check News, Check Weather, Call by Name, Call by Number, Redial** or others. All commands which pause email or news are identified on page 66.
- ❑ Receive a call, SMS/text or calendar reminder.

iLane will remember up to two different bookmarks – one for a message, and one for a news article. Each location is held until you create another bookmark of the same type (message or news), or until the current iLane session ends.

RECALLING YOUR “PAUSED” LOCATION

To continue reading your bookmarked (paused) message, say **Continue Messages**. iLane will return to that message and begin reading at its subject line. Say **Read** to listen to the message.

To continue reading your bookmarked (paused) news article, say **Continue News**. iLane will return to that news article and begin reading at its headline. Say **Read** to listen to the article.


 **NOTE:** *Rather than returning to the precise point of interruption, iLane instead refreshes your memory by starting at the beginning of the paused message or news article.*

4.10 Canceling An Action

If you change your mind, say **Cancel** to stop iLane from completing common actions or commands such as:

- Reply, Forward, or Delete**
- Compose Email**
- Compose SMS**
- Provide Feedback**
- Review or Record Again**
- Call Back**
- Call By Name / Call By Number / Redial**
- Check Weather**
- Check News**

You can stop outgoing email/call actions at virtually any point prior to the final command to send the message or place the call.




 **NOTE:** You can also say **Nobody** to cancel a **Forward, Compose Email, Compose SMS (optional), or Call By Name** task when iLane asks “Who would you like to...?”.

This chapter describes how to use advanced settings and other features to optimize iLane performance in your vehicle environment.


5.0 Changing iLane’s System Settings

Depending on your application and vehicle environment, you may wish to change certain system settings such as iLane’s responsiveness or extent of prompting and spoken help. Or you may be considering an update and simply wish to know what version of *iLane Platform* (a.k.a. *iLane VIAS*) is currently installed on your iLane. Use iLane’s internal *System Menu* at any time to find and/or adjust these global operating variables as shown in Table 1.


Table 1. How to Use the iLane *System Menu*


Open iLane’s <i>System Menu</i>	 (hold for 3 sec.)
Scroll through the menu / Adjust a setting	^ or v
Select an option / Save a setting	
Exit the menu	

NAVIGATING and SELECTING SYSTEM MENU OPTIONS

Figure 3 shows iLane’s complete *System Menu*. Use the ^ or v buttons to navigate from one option to another – iLane will describe each new option in full as you move to it. Press  to select any current option for adjustment.

ADJUSTING A SYSTEM SETTING

As shown in Figure 3, use ^ or v to adjust a selected setting up or down as desired. To save an adjustment, press  as prompted.

 **NOTE:** For clarity of explanation, Figure 3 shows a short summary “label” representing each *System Menu* topic described by iLane. These labels are not spoken.

TOOLS and ADVANCED OPTIONS

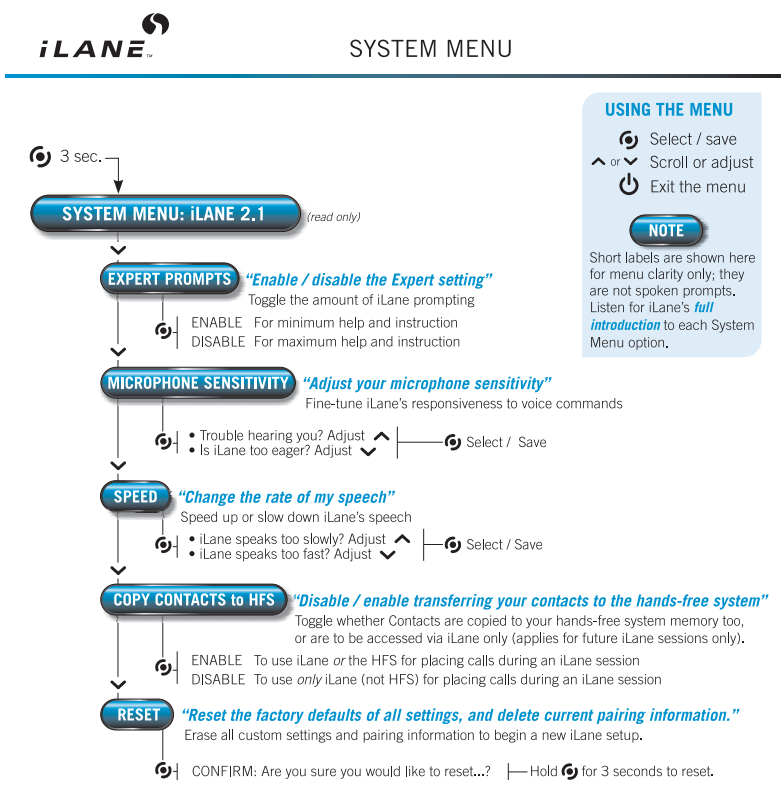



Figure 3. iLane System Menu Options

TOOLS and ADVANCED OPTIONS

SPECIAL KEYPRESS TO "RESTORE FACTORY DEFAULTS" (RESET iLANE)


Note that if you have selected the *Restore Factory Defaults* option, you must then hold  for 3 seconds to continue with the reset and clear iLane's memory. This special long key-press is a safeguard to help prevent accidental system resets as you explore the *System Menu*, and helps ensure all system information currently stored in iLane's memory remains intact until you are certain you want to delete it.

Restoring factory defaults also deletes your iLane pairings – so iLane can no longer communicate with your smartphone or hands-free system. See 5.2, *Restoring Factory Defaults* (page 54) for details.

A NOTE ABOUT ACCESSING YOUR CONTACTS VIA YOUR HANDS-FREE SYSTEM



By default during the final stage of iLane setup, your current smartphone Contacts are copied (via iLane) to available memory on your hand-free system (HFS). This "sync" process ensures that you retain the option of using your HFS phonebook for placing calls during an iLane session if you wish.

However, if you find this data transfer too time-consuming and/or too frequent (with some hands-free systems repeating the sync at every subsequent iLane startup), you may prefer to prevent this process and instead use only iLane for call management. At the "*To disable the transfer of your Contacts...*" option in the *System Menu*, follow the prompt to disable the transfer. At next power-up, iLane will not copy your smartphone Contacts to your HFS – you must instead use iLane for calling these Contacts.

 **NOTES:** **1)** A *transfer-contacts-to-HFS* change applies only at the **next** iLane power-up. **2)** This setting does not affect use of your HFS at other times, nor is it applicable if you are using the iLane headset option.

TOOLS and ADVANCED OPTIONS






SAVING YOUR NEW SYSTEM SETTINGS

To save an adjustment of a system menu option, press  as prompted. To leave the *System Menu*, press .

5.1 “Expert” Prompting Mode

As you become familiar with iLane’s capabilities and find yourself completing tasks quickly and with confidence, you may want to switch from *Standard* (default) to *Expert* prompting mode. *Expert* mode reduces the extent of iLane’s prompting and spoken help – iLane will simply speak less so that you can work more independently and with minimal distraction. Toggle your *Standard* vs. *Expert* choice in the iLane *System Menu*.

To set iLane’s prompting mode to *Expert* or *Standard*:

- (1) Hold  for 3 seconds to open the iLane *System Menu*.
- (2) Listening to iLane, use  or  until iLane offers to enable/disable the *Expert* prompt setting.
- (3) As narrated by iLane, press  to toggle the prompting mode on (enabled) or off (disabled).
- (4) Press  to exit the *System Menu*.

Your chosen setting will apply until you change it back again, or until you restore factory defaults (i.e., with “standard” prompting).

5.2 Adjusting Microphone Sensitivity

iLane’s ability to properly recognize your voice commands can be optimized with correct adjustment of *microphone sensitivity*. Fine-tuning this *System Menu* option can increase or decrease iLane’s responsiveness within your vehicle, keeping in mind that your chosen hands-free system is also a contributing factor.

TOOLS and ADVANCED OPTIONS

If you are experiencing consistently unreliable and/or inaccurate iLane response, adjust your microphone sensitivity as follows:

- ❑ If iLane doesn't seem to hear you, adjust UP
- ❑ If iLane misinterprets background sounds as voice commands, adjust DOWN.






For best results, try a single incremental adjustment and check performance with voice commands on your next trip. Re-adjust as necessary until iLane is both reliably detecting your voice commands and ignoring sounds or other speech.

5.3 Restoring Factory Defaults

In rare cases, such as if one or both of your iLane system Bluetooth pairings appear to be lost or malfunctioning, you may wish to *reset* the iLane device. A reset clears device memory, which removes pairing information and restores all original factory defaults (such as *System Menu* settings).

After a reset, iLane can longer communicate with either your smartphone or your hands-free system. Before restoring these links, also clear your smartphone and HFS of all their pairing information. Then, with all three components "blank", create both new pairings to iLane by following the step-by-step instructions provided in the *Quick Start* and/or in *3.1, iLane Setup Procedure* in this guide (see page 24).

RESET PROCEDURE for YOUR iLANE SYSTEM:

- (1) Hold  for 3 seconds to open the iLane *System Menu*.
- (2) Listening to iLane, use  or  to go to the option described as Restore Factory Defaults (refer back to Figure 3). Press  to select the option.
- (3) As prompted, hold  for 3 seconds to restore iLane's factory defaults and delete pairing information from iLane memory.

TOOLS and ADVANCED OPTIONS


- (4) On your smartphone, delete all paired Bluetooth devices, including iLane. This option is typically located in **OPTIONS** ⇨ **BLUETOOTH** ⇨ **BLUETOOTH OPTIONS** ⇨ **ENABLE BLUETOOTH**.

 **NOTE:** Consult your smartphone documentation for help.

- (5) Clear your hands-free system by deleting its pairings and clearing its memory as described in the documentation supplied with that system.

All three components – iLane, smartphone and hands-free system – are now reset. Create both new pairings to iLane by following the step-by-step instructions provided in the *Quick Start* and/or in *3.1, iLane Setup Procedure* in this guide (see page 24).

5.4 Personalizing and Updating iLane

 **NOTE:** Check my.iLane.com regularly for the latest iLane Preferences, update offers, and other supporting information.

SETTING ILANE PREFERENCES

To tailor iLane performance to suit your unique communication needs, consider defining your own iLane *Preferences*.

From your smartphone, go to my.iLane.com to select, set and apply any iLane *Preferences* currently available. For example, when listening to iLane's weather reports you may prefer temperatures to be reported in Celsius (metric) vs. Fahrenheit (imperial). Or you may wish to enable the **iLane Talk 2 TXT** option for recording brief messages delivered as typical SMS/text messages (note: requires *iLane Platform* – a.k.a. *iLane VIAS* – v2.4 or higher).

Modify *Preferences* at any time; your changes are applied when you begin your next iLane session.

TOOLS and ADVANCED OPTIONS

UPDATING iLANE

Your iLane system uses two software components: *iLane Platform* (a.k.a. *iLane VIAS*) for your iLane device, and the specific *iLane Gateway* application for your smartphone model. To keep your iLane system fully optimized with enhanced features and new options as they are released, obtain relevant software updates available at my.iLane.com. The Release Notes at the site will explain if a given release package consists of one or both components.

To update *iLane Platform or VIAS*: Use a PC to log into my.iLane.com, and follow the instructions provided at the site to 1) download the software to your PC and then 2) transfer it to your iLane device using a 3rd-party USB storage device. This USB process is also described on page 18 of this guide.

To install *iLane Gateway*: Use your smartphone to log into my.iLane.com, then go to the *Downloads* section and click on *iLane Gateway* to auto-install the proper version for your smartphone make and model. Follow the prompts on your smartphone – depending on the specific release version, you may also have the opportunity to enable optional new features, services or *Preferences* during the update process.

After an update, there is no need to reset iLane and/or re-pair iLane to your smartphone and HFS unless otherwise instructed in the supporting release documentation.

A NOTE ABOUT SOFTWARE NAMES

iLane Platform was renamed “*iLane VIAS*” in November 2010. Either term refers to the firmware residing on the iLane device.

iLane Gateway is sometimes called *iLane Mobile Gateway*. Either term refers to the software installed on your smartphone for enabling any use of iLane.

5.5 Multiple Users

INTRODUCTION / SETUP

Multiple users, each with their own smartphone, personal *iLane Gateway* application, and selected “apps” bundle(s), can share a single iLane device. Every user simply sets up their own iLane system as usual so that all pairing information is stored in iLane memory for future re-connects.

USING MULTIPLE SMARTPHONES WITH iLANE

Upon power-up, iLane searches for and connects to the most recently connected smartphone within range. Because searching requires 35-40 seconds for each absent smartphone, it is recommended that no more than 5-6 users share a single iLane device. This ensures that starting an iLane session with even the least-recently used smartphone takes no more than 3-4 minutes.

iLane connects to one paired smartphone at a time. To quickly switch to a different paired smartphone:

- (1) Disconnect iLane’s current smartphone by turning the smartphone off or by disabling its Bluetooth function, or by moving the smartphone out of range.
- (2) iLane will auto-connect to the next most recently connected smartphone within range.

6.0 Specifications

iLANE DEVICE

Weight	4.1 oz (116 g)
Dimensions	4.5" x 2.8" x 0.9" (114mm x 71mm x 23mm)
Power	12/24 VDC
Wireless Connectivity	Bluetooth® v2.0
Smartphone compatibility	BlackBerry Operating System (BBOS) 4.1 – 6.0
BES compatibility	BlackBerry Enterprise Server 4.1.3 – 5.0.x
Security	AES-256 bit encryption
USB Host	High-speed USB 2.0 Host, Type A
USB OTG	Micro-AB OTG – <i>future support only</i>
Microphone / Remote Input	2.5mm – <i>future support only</i>
Internal speaker	2.5W D-class
Expansion Port	36-pin – <i>future support only</i>
μSD	<i>Not included; future support only</i>
Operating temperature	-20°C to +50°C
Storage temperature	-40°C to +85°C

OTHER

Browse Unopened limit	Last 14 days
# Contacts supported	Currently 5000 max. <i>NOTE: includes 2 auto-contacts: iLane Customer Care, and a "Nobody" contact used for canceling a Call By Name request.</i>
VoiceNote length (sent as mp3 attachment)	<ul style="list-style-type: none"> • Max. 15 sec. (64kB) with BlackBerry Operating Systems 4.3 or older; • Max. 60 sec. (256kB) for all other supported smartphones / operating systems <i>NOTE: iLane chimes a cut-off cue at 50 seconds.</i>
iLane Talk 2 TXT length (for external transcription)	<ul style="list-style-type: none"> • Max. 6.5 sec. <i>NOTE: iLane chimes a cut-off cue.</i>

SPECIFICATIONS and REGULATORY INFORMATION

6.1 Regulatory Information

This device contains:

FCC ID: **V57-IL04**

Industry Canada IC: **7120A-IL04**.

This device complies with FCC-Part 15 rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help



INFORMATION FOR USER: Changes in iLane equipment are not permitted without express approval by the parties responsible for compliance, and could void the user's authority to use iLane.

SPECIFICATIONS and REGULATORY INFORMATION

TO READ THE iLANE PRODUCT LABEL

iLane's product label with approved regulatory markings is visible when you remove iLane's bottom cover. This cover protects the label during installation or removal of iLane's rear slide-on mounting bracket (optional).

Access the product label as shown at right.

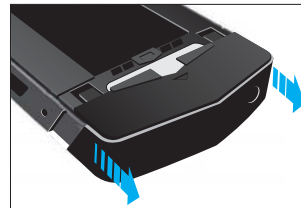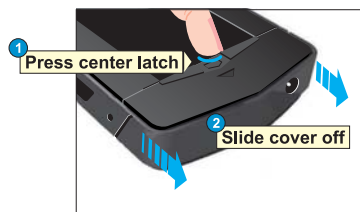

CONTACT US

SECTION **7**

Do you have questions or concerns? Please contact us – we want your iLane experience to be as productive and enjoyable as possible, and we're here to help.

TECHNICAL SUPPORT

Online Support materials: www.iLane.com, then click *Support*

Phone: 1-866-818-6637

Email: support@iLane.com

ALL OTHER INQUIRIES

Phone: 1-866-925-8021

Email: info@iLane.com

RETURNS


If your iLane device appears to be defective and you wish to return it for service or replacement, please contact us (see above). We will be happy to assist you and provide the *JMS Return Merchandise Agreement* form that must accompany all returns. Please do not return iLane to place-of-purchase.

NEED MORE INFORMATION?


For additional up-to-the-minute news about iLane, and to learn more about available updates, options, compatibilities or other current supporting materials, visit my.iLane.com or www.iLane.com. We want to help you get the most out of iLane!

This section defines voice commands currently recognized by iLane.



iLane recognizes and responds to the spoken words listed in Figure 4. For best results with most hands-free systems, speak these commands naturally and at a typical conversational volume level. iLane will follow up with a question or an option if further clarification is required.

 *TIP: For convenience in your vehicle, basic iLane Voice Commands are provided in the iLane Quick Start and can be heard with **Options** command.*

GENERAL GUIDELINES

- ❑ Voice commands are disabled at start-up. Press  (or use your HFS) to manually cancel this silent “Good-Bye” mode and enable voice commands.
- ❑ Speak naturally without raising your voice or slowing your speech. For best results when interrupting iLane, wait for a natural break.
- ❑ For reminders of voice commands during use, say **Options**.
- ❑ To escape and stop most tasks, say **Cancel**. See list on page 49.
- ❑ iLane’s response and performance can vary depending on your hands-free system. Work with settings on your HFS and in iLane’ *System Menu* to optimize iLane for your vehicle environment.
- ❑ Silence iLane at any time with **Quiet**, **Good-bye** or **Do Not Disturb**.
- ❑ To pause reading mid-message or mid-article and insert a bookmark for recalling later in your iLane session, interrupt iLane with **Quiet** or any other top-level command. Such “bookmarking” commands are identified with a “▲” on page 66. To return to the paused message or article, say **Continue Messages** or **Continue News**.
- ❑ Do not hesitate to send questions and comments directly to the iLane technical support team. Simply say **Provide Feedback**. Or say **Call By Name** and respond with **iLane Support** when prompted.

VOICE COMMANDS

GENERAL	<ul style="list-style-type: none"> ^^ Options = Spoken help and reminders for your current task ^^ Quiet = iLane stops speaking but still listens for commands Good-bye = iLane is silent and ignores voice commands until a new msg or call arrives, or until you press  (or HFS). **Do Not Disturb = iLane accepts calls, but is otherwise silent and ignores voice commands until you press  (or HFS button). Continue Msgs / News = Return to "bookmarked" message or article <ul style="list-style-type: none"> Yes = Affirm a request (for example, "Should I call John Smith?") No = Reject a request (for example, "Do you want to accept the call?") ^ Browse = Find all email, plus all SMS/texts during this iLane session ^ Browse Unopened = Find all unopened messages and new SMS/texts ^ Check Messages = Find new messages
EMAIL & SMS	<ul style="list-style-type: none"> Read / Read Message = Read the current message <ul style="list-style-type: none"> Read Again = Repeat the current message Mark As Unread = Change email message status to "unopened" Next Message = Go to the next (older) message Previous Message = Go to the previous (newer) message Reply = Respond to an email with a VoiceNote or a text template Reply = Reply to an SMS/text using iLane Talk 2 TXT (optional) Forward = Re-direct this email to a different contact Delete = Delete this email message (confirmation required) ^ Compose Email = Initiate / record an email message (VoiceNote .mp3) ^ Compose SMS = Initiate / record an SMS for sending as text (optional) <ul style="list-style-type: none"> Review = Listen to recorded message before sending Record Again = Start over and record a new message Send Message = Deliver this message Cancel = Stop; do not complete this action
CALLS	<ul style="list-style-type: none"> ^^ Call By Name = Call a contact by saying their name ^^ Call By Number = Call someone by saying their phone number <ul style="list-style-type: none"> Call Back = Call the sender of the current message Nobody = Cancel current "Who would you like...?" request Answer / Accept = Answer the phone / accept the incoming call <ul style="list-style-type: none"> ^^ Redial = Place a call to the most recently-dialed number
OTHER	<ul style="list-style-type: none"> ^^ Check Calendar = Find today's upcoming calendar events ^^ Check Weather = Listen to weather forecasts for a specific city <ul style="list-style-type: none"> ^ Check News = Listen to news articles / headlines Next Article = Go to the next news article / headline Previous Article = Go to the previous news article / headline ^^ Provide Feedback = Send a VoiceNote (.mp3) to the iLane support team

^ If reading email, this command also "bookmarks" the current message
 ^ If reading news, this command also "bookmarks" the current article
 ** iLane's start-up mode

Figure 4. iLane Voice Commands



© 2010 Intelligent Mechatronic Systems Inc. All rights reserved.

iLane™ and its related marks, logos, slogans, images and symbols are the exclusive property and trademarks of Intelligent Mechatronic Systems Inc.

Patents Pending.

Intelligent Mechatronic Systems Inc.
435 King St. N.
Waterloo, ON
N2J 2Z5 Canada

TECHNICAL SUPPORT: support@iLane.com
1-866-818-6637

GENERAL INQUIRIES: iLane@intellimec.com

www.iLane.com

BlackBerry® and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Used under license from Research In Motion Limited.

All logos, trademarks and copyrights of The Weather Network are owned, controlled, and/or licensed by Pelmorex Media Inc. ("PMI") and/or its affiliates and related companies

Associated Press – Property of Associated Press © 2009

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

BlueAnt® is a registered trademark of Bluetooth Wireless, Ltd.





iLane Tips & Tricks – From Top Users

“Setup is ‘plug-n-pair’...”

- Download the mobile gateway, go to myxtop.com **on your phone.**
- Plug the in-car device into your car’s accessory port / cigarette light adapter.
- Enable your Smartphone Bluetooth and your car or handsfree system’s Bluetooth.
- Use your voice.

“Interrupt at any time”

The average user probably waits for iLane to finish before they interrupt – maybe it’s because we’re polite, or simply because we don’t want to talk over her voice. Well, you totally can interrupt iLane at any time with your next command or to simply say cancel or goodbye.

“Mic Sensitivity is Super Important”

Every user and every car has different acoustics, be sure to hop into the System Menu on your in-car device [ie: the 7100] to increase or decrease the Mic Sensitivity to work for you.

I drive an Audi and find the Med-High setting works the best for me.

“Get to Know Your Car’s Shortcuts”

Bet you didn’t know you can use your steering wheel buttons to bring up iLane and tuck her away? This is a super easy way to keep everything right in reach. Depending on the hands-free system you have, you may even be able to end voice recordings and email compositions with the flick of a button right off your steering wheel.

“Mark Unread is a life saver”

You may find yourself using this command more than ever – on your way into the office, you can mark emails unread that you want to go back to once you’re in front of your computer and simply hear and reply to or delete the one’s that can wait or need a quick response. Simply browse through your inbox, hear your emails and say ‘Mark Unread’ if you want to tag it for follow up.

Your Connected Car Starts Here.



VOICE COMMANDS

MODES

- Quiet** iLane stops speaking but still listens to voice commands
- Good-Bye** iLane is silent and will ignore voice commands until a new email arrives, or until you press the “select” button on the iLane unit or click the button on your wireless headset
- Do Not Disturb** iLane is silent and will ignore voice commands until you press the “select” button on the iLane unit or click the button on your wireless headset

MESSAGE COMMANDS

- Browse** Find all email messages
- Browse Unopened** Find all unopened email messages
- Check Messages** Find new messages
- Read Message** Read the message
- Compose SMS** Initiate or record a text message (available with Talk 2 TXT app)
- Read Again** Repeat the message
- Mark As Unread** Change message status to “unopened”
- Next Message** Go to the next email message
- Previous Message** Go to previous email message
- Reply** Respond with a voice note .mp3, or a text template
- Forward** Redirect this message to different contact
- Cancel** Stop, do not complete this action
- Compose Message** Initiate / record an email message (voice note .mp3)
- Review** Listen to outgoing message before sending
- Record Again** Start over and record again
- Send Message** Deliver this message
- Delete** Delete this message (confirmation required)

CALL COMMANDS

- Call By Name** Call a contact by saying their name
- Call By Number** Call someone by saying their number
- Call Back** Call the sender of current message
- Nobody** Cancel current Call By Name request

OTHER

- Yes** Affirm a request (for example, “Should I call John Smith?”)
- No** Reject a request (for example, “Do you want to accept the call?”)
- Check Calendar** Find today’s upcoming calendar events
- Check News** Listen to news articles
- Check Weather** Listen to weather forecasts for a specific city
- Provide Feedback** Send a voice note to the iLane support team
- Options** Spoken help and reminders for your current task
- Continue Msgs / News** Return to “bookmarked” message or article
- Next Article** Go to the next news article / headline
- Previous Article** Go to the previous news article / headline

You can interrupt iLane with a voice command at any time.